



OrcaSlicer_V1.6.3_使用说明

OrcaSlicer_V1.6.3_ Instructions for use

- 1、将 OrcaSlicer_V1.6.3_Win64 解压。
OrcaSlicer_V1.6.3_Win64 decompression.
- 2、打开软件 orca-slicer.exe
Open software orca slicer.exe
- 3、切换语言。
Switch languages.

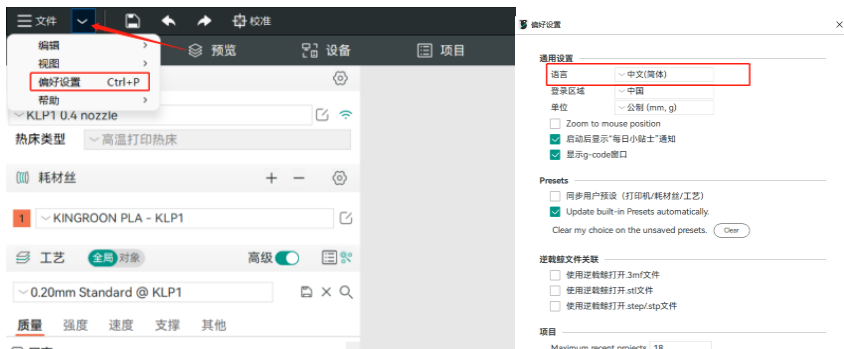

- 4、点击软件左上角-导入-导入预设，选择三个文件（0.20mm Standard @ KLP1.json）（KINGROON PLA - KLP1.json）（KLP1 0.4 nozzle.json）
Click on the top left corner of the software - Import - Import Presets, and select three files (0.20mm Standard @ KLP1.json) (KINGROON PLA - KLP1.json) (KLP1 0.4 nozzle.json)

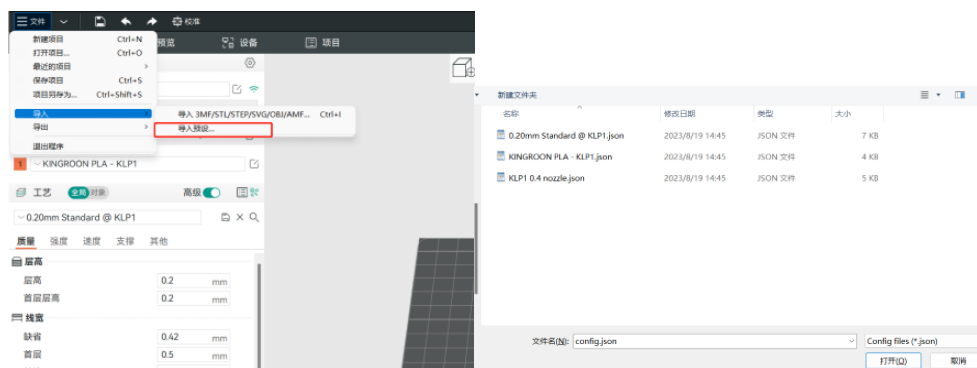

- 5、正确导入参数后如下图所示，如果未出现，请自行选择参数。
After importing the parameters correctly, as shown in the following figure, if they do not appear, please choose the parameters yourself.

